

# BADGER-IR

## Quick Start Guide

The BADGER-IR provides a high-capacity remote power source for remote devices requiring 12 VDC power.



### Step 1. Charge the batteries

- Set the **On - Off** power switch to **Off**. This switch **MUST** be Off to charge the unit.



- Connect the battery charger 12 V connector to the Charger Input connector inside the BADGER-IR unit.
- Allow the battery to charge fully before use. When the battery is charging, the red LED on the charger is lit. When fully charged, the red LED extinguishes and the green LED lights. Remove the charger promptly. It may take up to 10 hours to fully charge the batteries.



### Step 2. Connect the power extension cable

- Carefully insert the power extension cable jack to the plug on the side of the case, then tighten the collar on the jack connector until it is snug.



- Connect the other end of the power cable to your 12 VDC device (not included).
- Set the On - Off power switch to **On** to provide power to the 12 VDC device.

### NOTES:

1. The BADGER-IR has a capacity of 33 AH. Runtime will vary based on the device it is powering.
2. If the battery charge is fully expended, the charger provided may not be able to recharge the unit. Contact your sales person for more information.