



**INTELLI-M**<sup>®</sup>  
**ACCESS**

Supervisor Plus  
Quick Install Guide

infinias

# Before You Begin

---

Intelli-M's Supervisor Plus® software software can be used in conjunction with the eIDC. Use Supervisor Plus to manage, view, and report activity through an eIDC controlled network. This guide contains brief instructions for installing and configuring the software package.

Install eIDC hardware components and software as instructed in this document. It is recommended that you familiarize yourself with these instructions before beginning installation.

The Installation and Reference manuals contain more detailed information. These manuals are located on our website at [www.infinias.com](http://www.infinias.com).

# Supervisor Plus Communication Server

---

The Supervisor Plus software can support more than 1,024 access areas (doors, elevators, and so on). To use Supervisor Plus as a Communication Server, perform the following steps:

1. Install the Supervisor Plus Software.
2. Create the Supervisor Plus Database.

## INSTALL THE SUPERVISOR PLUS SOFTWARE

1. Insert the Intelli-M Supervisor Plus CD into the CD-ROM drive of the computer. If a message appears to install Microsoft .NET Framework 3.0, click "Install." if this is the case. It may take a few minutes for .NET Framework to install.

**NOTE:** If the auto-run feature does not start after a minute, launch the installer manually: click START on the Windows Menu, select RUN..., type D:\LAUNCH.EXE (where D:\ is your CD-ROM drive), and click OK.

2. Follow the screen prompts to install the Supervisor Plus files onto the computer.
3. After the software is installed, the Intelli-M Supervisor Plus icon appears automatically on your Windows Desktop.
4. Remove the Supervisor Plus software CD from the CD drive.

**IMPORTANT:** A complete set of Intelli-M documentation in PDF format is located on the Intelli-M Documentation CD.

## CREATE THE SUPERVISOR PLUS DATABASE

1. Double-click the Supervisor Plus desktop icon.
2. Follow the screen prompts to create the Supervisor Plus database.
3. The login screen will appear. The word "admin" (no quotes) should be used for both the default user and password.
4. Go to *Program and Test System For Supervisor Plus* on page 14

# PROGRAM AND TEST SYSTEM FOR SUPERVISOR PLUS

## DEMO CONFIGURATION

**IMPORTANT:** Press the <F1> key to display online help for any Supervisor Plus screen.

1. From the Event screen, click the "System" button.
2. From the System screen, click the "Database Management" button. Then select "Restore..." from the Database section of the Database Management window.
3. Navigate the following path from within the "Open" pop-up dialog and select the file "DemoDataBase.bak":

Local Disk (C:) > Program Files > Intelli-M > Intelli-M Supervisor Plus > Databases > DemoDataBase.bak

4. Click the "Yes" button on the Intelli-M Main Database Restore dialog to load the Demo Database into Supervisor Plus. (Click "OK" on any dialog screens that pop up.)
5. After the "Restore completed successfully" pop-up dialog is displayed, click the "Done" button to return to the System screen.
6. From the System screen, click the "Controllers" button, and the "Add" button (or highlight a controller line and click Modify). If necessary, provide the following:
  - Serial number
  - IP Address
  - Reader Type

Then click "OK" and "Done" to return to the System screen.

## FULL CONFIGURATION

**IMPORTANT:** Press the <F1> key to display online help for any Supervisor Plus screen.

1. From the Event screen, click the "System" button.
2. From the System screen, click the "Global Configuration" button, select "Wiegand" as the card reader type, and then click "OK."

**IMPORTANT:** With eIDC, smart card is not supported.

3. From the System screen, click the "Controller" button and the "Add" button (or highlight a controller line and click Modify). If necessary, provide the following:

- Serial number
- IP Address
- Reader Type

Then click "OK" and "Done" to return to the System screen.

4. From the System screen, click the "Inputs" button, select the "Definition" tab, and then set the "Normal status" as appropriate.

Then click "OK" to return to the System screen.

5. From the System screen, click the "Outputs" button, select the "Definition" tab, and then set the "Initial status (outside of schedule)" as appropriate.

**NOTE:** De-Energized or Energized is dependent on lock type.

Then click "OK" to return to the System screen.

6. From the System screen, click the "Access" button, click the "Add" button to add an Access Service, and then provide the following if necessary:

- Fill in "Description" field.
- Click the "Select Host" button and make a host controller selection.
- Select the "Input" tab and add a door lock status.
- Select the "Output" tab and add a lock output and warning output.
- Select the "Triggers" tab and add a trigger. Then add readers and request to exit buttons, and anything that unlocks door.

Then click "OK," "Apply," and "Done" to return to the System screen.

7. From the System screen, click the "Card Holders" button and do the following:

- Add or Modify a card holder.
- Fill in the "Site code" field and the "Card code" field.

- Fill in the first and last name of the card holder.
  - From the "Privilege group" drop down, select "Master" for unrestricted access to all services in the system and then click "OK."
  - Click the "Events" button.
8. Swipe the card at the active card reader to ensure the functionality of the system. Access should be granted.

## **REVISION HISTORY**

<b>Manual #</b>	<b>Date</b>	<b>Comments</b>
002 QSG	4/09	Original version.

infinias is a trademark of infinias, LLC

Intelli-M and Supervisor Plus are registered trademarks of infinias, LLC

© Copyright 2009, infinias, LLC All rights reserved.



infinias, LLC  
Direct Tel: (317)348-1086  
Toll Free in USA: (866)496-5783  
[www.infinias.com](http://www.infinias.com)