


## 6~50MM VARIFOCAL AUTO DC IRIS LENS


〈HOW TO FOCUS PRECISELY〉

1.REQUIRED TOOL (PACKED INTO GIFT BOX)



(Focus glass)

2.PUT FOCUS GLASS ON THE TOP OF THE LENS WITH ONE HAND  
AFTERWARD FOCUS LENS AS USUAL WITH OTHER HAND

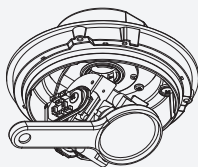

\*\* REMARK : FOCUSING BETWEEN 6~20MM RANGE MAY NOT REQUIRE THE TOOL  
BUT 20~50MM RANGE IS NEEDED TO USE THE TOOL

3.REMOVE THE TOOL, (IT LOOKS OUT OF FOCUS, BUT DISGARD IT)  
PUT DOME COVER BACK ON THE BASE (IT BECOMES GOOD CONDITION AGAIN).

